

HPE Aruba Networking User Experience Insight (UXI) — Sensors

HPE 
GreenLake





HPE Aruba Networking User Experience Insight offers 2 types of sensors, G5 — supporting Wi-Fi 5 and earlier network environment, and G6 — supporting Wi-Fi 6 and earlier network environment. Each G5 and G6 sensor is further categorized based on whether it uses Cellular in addition to Wi-Fi and Ethernet for provisioning and backhaul data transfer.

1. G5 Models:

- UX-G5E — Wi-Fi + Ethernet
- UX-G5C — Wi-Fi + Ethernet + Cellular

2. G6 Models:

- UX-G6 — Wi-Fi + Ethernet
- UX-G5C — Wi-Fi + Ethernet + Cellular

This brief explains how customers can deploy and use HPE Aruba Networking UXI sensors:

1. What's in the box

2. Installation

3. Connectivity

4. Status lights

5. Sensor onboarding and troubleshooting app

6. Sensor sizing guide

7. Resources and support

1. What's in the box:



1 x Sensor



1 x Mounting
bracket



2 x Drywall
anchors



2 x 3 mm
Screws




1 x Wrench



2 x 3 M
Command strips



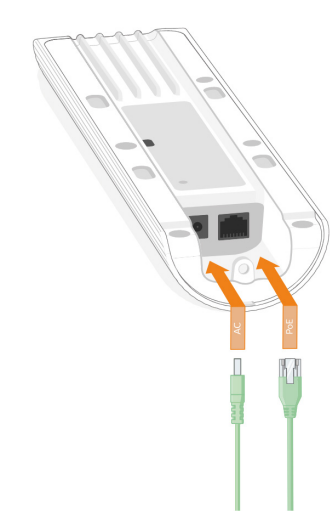

2. Installation

Power

For the sensor to communicate with the dashboard you must connect the sensor to an ethernet port with internet access and ensure the URLs mentioned in the connectivity section are reachable.



The sensor can be powered using power over the Ethernet 802.3af or with an AC power adapter sold separately. Use the appropriate plug type for your region as described in the section below (Included plugs).

Included plugs

Plug identifier	Country region	Plug type
 APD2-US	USA	A
 APD2-EU	Europe	C
 APD2-UK	United Kingdom	G
 APD2-AR	Argentina	I (Argentina, specific)
 APD2-AU	Australia	I



  Included plugs

Plug identifier	Country region	Plug type
 APD2-KR	Korea	F
 APD2-BR	Brazil	N
 APD2-CN	China	A (China specific)

For more information on standard plug types and voltages, view the [International Electrotechnical Commission](#).

Installation checklist

- Sensors are designed to be mounted on a vertical surface, oriented vertically with the HPE Aruba Networking logo at the bottom.
- Other orientations may be used to accommodate cabling requirements. Below is the list of recommendation on sensors installation:
1. Near to where:
 - Users congregate
 - or Wi-Fi is used extensively
 - or Wi-Fi performance is critical
 - or there have been performance complaints.
 2. Ensure Ethernet is connected.
 3. With good Wi-Fi coverage.
 4. Further than 5 ft (1.5 m) from the nearest Wi-Fi access Point.
 5. Indoors, within 32–95°F (0–35°C).
 6. Away from physical obstructions including cabinets, server rooms, underneath desks etc.
 7. At a similar height to users’ phones or laptops:
 - mounted on a wall or pillar at a height of 4–5 ft (1.2–1.5 m)
 - or on a desk/table.
 8. Away from direct sunlight.



9. Safe from contact with water.
10. Away from significant electrical current.
11. Away from metallic surfaces.
12. Safe from accidental damage from doors, moving furniture, equipment, and passers-by.

Mounting options

1. Secure wall installation.
2. Quick wall installation with removable adhesive.
3. Secure junction box installation.
4. Ceiling and T-bar installation (mounting kit sold separately).
5. Secure mount with Kensington lock.


(Warning — Take necessary safety precautions, use appropriate protective gear and use the proper tools.)

1. Steps for secure wall installation

Step 1: The sensor should be mounted vertically with the HPE Aruba Networking logo at the bottom.




Step 5: Power the sensor using PoE or the AC power supply (sold separately).

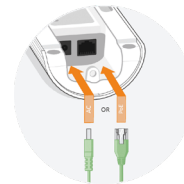

Step 2: Follow the installation checklist to find an appropriate spot-on vertical surface such as a wall or pillar.



Step 6: Slide the sensor on the mounting bracket.

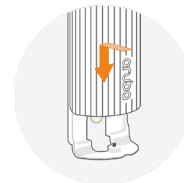

Step 3: Install the mounting bracket using the provided screws and drywall anchors if necessary.



Step 7: Tighten the security screw with the provided wrench.



Step 4: Route the power supply through the large hole at the bottom of the mounting bracket.




2. Quick wall installation with removable adhesive

Using the included command strip adhesives is a quick and simple way to mount the sensor but may be less secure in some environments.

Note — Only use adhesives on vertical surfaces lower than 6.5 ft (2 m) and in areas where the sensor will not hurt anyone if it falls.

Step 1: The sensor should be mounted vertically with the HPE Aruba Networking logo at the bottom.

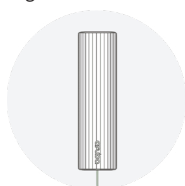

Step 6: Slide the sensor on the mounting bracket.



Step 2: Follow the installation checklist to find an appropriate spot-on vertical surface such as a wall or pillar.



Step 7: Remove command strip red liners. Press adhesives to the back of the mounting bracket using the markings as a guide.




Step 3: Clean the wall surface by rubbing alcohol and let dry. Do not use household/industrial cleaners.



Step 8: Remove black liners. Press mounting bracket firmly to wall for 30 seconds, or more until secure, then slide sensor onto mount.




Step 4: Route the power supply through the large hole at the bottom of the mounting bracket.

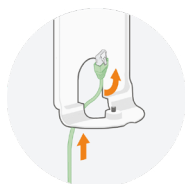

Step 9: Tighten the security screw with the provided wrench.



Step 5: Power the sensor using PoE or the AC power supply (sold separately).

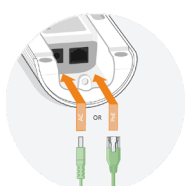

3. Secure junction box installation


Step 1: The sensor should be mounted vertically with the HPE Aruba Networking logo at the bottom.




Step 2: Follow the installation checklist to find an appropriate spot-on vertical surface such as a wall or pillar.




Step 3: Attach the sensor mounting bracket to the box using the provided screws and route the power supply through the mounting bracket opening.

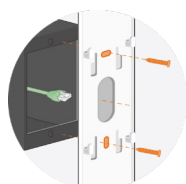

Step 4: Power the sensor using PoE or the AC power supply (sold separately).

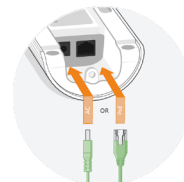

Step 5: Slide the sensor on the mounting bracket.

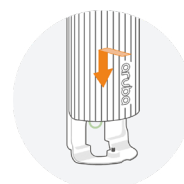

Step 6: Tighten the security screw with the provided wrench.




4. Ceiling and T-bar installation (mounting kit sold separately)


Step 1: Follow the mounting kit directions to attach the mounting kit to the ceiling.




Step 5: Lock Ceiling Rail Adapter onto mounting bracket.

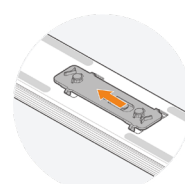


Step 2: Route the power supply through the large hole at the bottom of the mounting bracket.

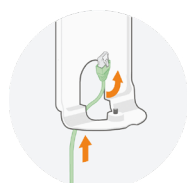


Step 6: Lock Mounting Bracket onto Ceiling Rail Adapter.

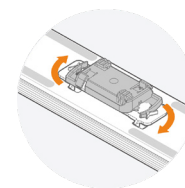

Step 3: Power the sensor using PoE or the AC power supply (sold separately).

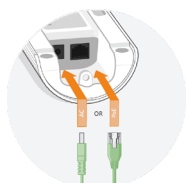

Step 7: Twist assembled sensor onto Ceiling Rail.

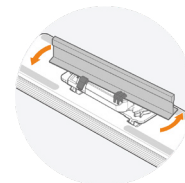

Step 4: Slide the sensor on the mounting bracket.



5. Secure mount with Kensington lock

Step 1: After mounting in a public place, secure the sensor using a Kensington lock.



3. Connectivity

Required URLs

The sensor requires access to at least one wired or wireless network with Internet access and following URLs reachable:

Description	URL
Primary URL for all sensor communication with our backend systems	https://device-gateway.capenetworks.io
Firmware updates, tools, and patches	https://cape-device-binaries.s3.amazonaws.com
Firmware updates, tools, and patches	https://cape-build-artefacts.s3.amazonaws.com
Sensor storage	https://cape-storage-service.s3.amazonaws.com

The sensor uses one of the following methods to get the correct time:

Description	URL
NTP server	https://0.pool.ntp.org
Backup HTTP (Port 80) check	http://device-gateway.capenetworks.io

Note — If these URLs on the ethernet network are only available through a proxy, you must use the HPE Aruba Networking User Experience Insight Install and Troubleshooting App to set the initial proxy configuration.

For additional troubleshooting help and to apply configuration in the event of poor cellular data coverage, you can download and install the [HPE Aruba Networking User Experience Insight Troubleshooting App](#)

Connectivity check

The following URLs are used by the sensor to test whether the sensor has external connectivity. Failure to reach these URLs will result in an error on the dashboard that say “Unexpected Captive Portal or Proxy”:

- <https://cdn.capenetworks.io/auth>
- <https://cdn.capenetworks.io/connectivity-check>
- <http://35.241.22.134/auth.html>
- <http://35.241.22.134/connectivity-check>
- <https://captive.apple.com/hotspot-detect.html>

Note — If your network has a Captive Portal, depending on your setup, you probably do NOT want to whitelist the following URLs. This is because the sensor might not be properly redirected to the Captive Portal. Instead, the following URLs should be accessible but result in a Captive Portal redirect response for unauthenticated clients.

Contact [support](#) to set up a Captive Portal test.



For sensors supporting cellular module — G5C and G6C

Cellular data connectivity is required.

Included with your User Experience Insight software subscription is a managed cellular service provided by Twilio. For best results, position the sensor in a location likely to have good cellular data coverage (3G/4G/LTE) such as within the first 2 walls of a building.

For a list of available Twilio operators as well as coverage maps, see the following external document [“Programmable Wireless: Available Operators \(PLMNs\)”](#).

4. Status light

The status lights indicate the state of UXI Sensor:

 Blue	Booting without factory reset button
 Magenta	Booting with factory reset button
 Magenta blinking	Running factory reset
 White blinking	Software starting
 White	Sensor testing your network
 Green blinking	Waiting for configuration
 Yellow	Power outage detected
 Yellow blinking	Power outage shutting down
 Orange	No connectivity
 Cyan blinking	Waiting for configuration via Bluetooth / Bluetooth mode ON
 Rainbow	Identifying sensor

5. Sensor onboarding and troubleshooting app

Use the UXI App to troubleshoot any issues which may be preventing sensors from connecting to the UXI cloud service. Onboard sensors quickly and easily on Ethernet networks with 802.1X authentication or proxies using the App's hands-free auto configuration via Bluetooth.


The application supports sensor models UX-G5E and UX-G5C only. UXI App is available for iOS devices. Android™ app coming soon.

How it works

1. In the User Experience Insight dashboard, configure the ethernet network with the appropriate settings and assign the network to the sensor.
2. Download and install the User Experience Insight Troubleshooting Application on your smartphone.
3. Enable Bluetooth on your smartphone.
4. Open the HPE Aruba Networking UXI App. The app will scan for nearby sensors. Only sensors with issues connecting to the UXI cloud will be displayed.
5. The app will automatically download available configuration settings and transfer them to sensors nearby. No pairing or other interaction is required.



Nearby sensors — See sensors within Bluetooth range. View sensor information including visible SSIDs and signal strength.

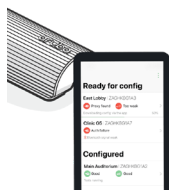

Troubleshooting — Diagnose issues preventing sensors from reaching HPE Aruba Networking cloud services via Ethernet or cellular. See network interface and connection information, issue details, and suggested fixes.



Private and secure — The app makes use of the same industry leading authentication as the UXI dashboard, restricting usage to only those linked to your account. All communication between the UXI device and app is encrypted and makes use of unique random identifiers.




Identify Sensors — Pre-provisioning multiple sensors? Identify a specific sensor from the app. Swipe or tap “Identify” to change the sensor’s Status LED color.



Auto configure —

Step one: Set wired network configuration, including 802.1X credentials, certificates, and/or proxy settings on the UXI dashboard.

Step two: Hold your app-enabled device near a sensor to automatically apply configuration via Bluetooth.

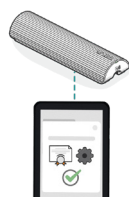

6. Sensor sizing guide

How many User Experience Insight sensors do I need to monitor my network?

The number of sensors you need depends on your environment and monitoring needs. Here are some guidelines which can help you decide how many sensors are right for you.

General guidelines

- Place at least one sensor in each area that users congregate or use Wi-Fi the most, and in areas with Wi-Fi complaints
- Place sensor in areas with Wi-Fi or network performance concerns or complaints
- Place sensor in locations that are difficult, time consuming or expensive to reach in person (e.g., remote branches)
- Place sensor in any areas with mission-critical equipment connected to Wi-Fi
- Use at least one sensor per SSID tested
- Do not place sensor in areas with access points that get very little data traffic such as coverage access points on the edge of your building or in less frequented areas (e.g., storage rooms)
- In large networks with multiple access and aggregation switches, consider placing at least one sensor per access switch
- Try not to move the sensor after installation as this invalidates comparisons with historical data. If you plan to move a sensor to trouble spots in response to user complaints, we recommend keeping a spare sensor for temporary, tactical deployments
- Typically, expect a ratio of one sensor for every six to 24 Access Points
- When in doubt, start small and add more sensor over time
- Speak to a User Experience Insight product expert if you need more information

Read on for additional guidelines and ideas by type of environment.

SMB and enterprise

- 1–2 sensor per open-plan working area
- 1 sensor per:
 - Lobby or reception area
 - CEO/executive office
 - Busy conference/meeting room
 - Cafeteria
 - Remote branch

Hotels

- 1–3 sensor in the hallway on each of the hotel floors
- 1–2 sensor per lobby
- 1 sensor per:
 - Business center
 - Hotel conference and meeting rooms
 - Restaurant or cafeteria
 - Fitness center
 - High occupancy staff areas (kitchen, working areas, housekeeping etc.)



**Hospitals**

- 1–3 sensor in the hallway of each hospital floor
- 1–2 sensor in high occupancy staff/nurse and doctor areas (kitchen, working quarters, resting areas, finance, insurance, medical records etc.)
- 1 sensor per:
 - Lobby or reception areas (ground level and receptions on respective floors)
 - Cafeteria or food court
 - Patient waiting area
 - Family visitation areas

Education

- 1–3 sensor in the hallway of each university or school floor
- 1–2 sensor per cafeteria
- 1–2 sensor per library or study area
- 1–2 sensor per indoor sports facility
- 1–2 sensor per high occupancy staff/teacher/management areas (kitchen, working areas, principal office, finance and accounting, etc.)
- 1 sensor per:
 - Large classroom/lecture venue
 - Computer room/public computer desk area
 - Laboratory

Shopping center or mall

- 1–3 sensor per food court
- 1–2 sensor per major store/anchor tenant
- 1 sensor per entrance area
- 1 sensor near rest rooms

Arena

The number of sensors needed highly depends on the venue size and capacity.



7. Resources and support:

Help articles — Read our handy articles about common questions we get on our support channel.

[Read](#)

Intercom — If you experience any issues with your sensor or dashboard, use the speech bubble icon at the bottom right of your dashboard to chat to someone from HPE Aruba Networking User Experience Insight team.

[Go To Dashboard](#)

[Compliance and techdocs](#)

Make the right purchase decision.
Contact our presales specialists.



Chat now (sales)



Call now

Visit [ArubaNetworks.com](https://www.arubanetworks.com)



Get updates



**Hewlett Packard
Enterprise**

© Copyright 2024 Hewlett Packard Enterprise Development LP. The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Bluetooth is a trademark owned by its proprietor and used by Hewlett Packard Enterprise under license. Android is a registered trademark of Google LLC. All third-party marks are property of their respective owners.

TB_hpeanwUserExperienceInsight-UXI-Sensors_OH_100124 a00125616ENW